



## INSTALLATION INSTRUCTION SHEET

**IMPORTANT NOTES:**

- PLEASE ENSURE SMART DISPLAY UNIT IS FREE OF ANY DAMAGE
- EXTENSION LEAD MAYBE REQUIRED
- PLEASE ENSURE ALL LEADS ARE HIDDEN AND NOT A TRIPPING HAZZARD
- TWO PEOPLE REQUIRED TO POSITION SMART DISPLAY UNIT

**UN-PACKING UNIT:**

1. MOVE SMART DISPLAY INTO POSITION
2. CUT ALL PACKAGING STRAPS
3. REMOVE TOP CARDBOARD LID COVER
4. SLIDE CARDBOARD PACKING BOX UP AND OVER THE SMART DISPLAY UNIT
5. REMOVE ALL BUBBLEWRAP FROM THE SMART DISPLAY UNIT
6. LIFT SMART DISPLAY FROM BOTTOM CARDBOARD TRAY
7. LIFT FROM BOTTOM OF UNIT - DO NOT LIFT FROM THE SHELVES
8. POSITION SMART DISPLAY ONTO END CAP OR DESIGNATED POSITION

**TURNING SYSTEM ON:**

1. PULL POWER LEAD OUT FROM BOTTOM HOLE LOCATED AT THE REAR OF THE DISPLAY
2. PLUG POWER LEAD INTO POWERPOINT AND TURN ON POWER
3. AN EXTENSION LEAD MAY BE REQUIRED (NOT SUPPLIED)
4. SMART DISPLAY UNIT WILL AUTOMATICALLY POWER ON AND SELF INITIATE
5. SMART DISPLAY UNIT WILL BEGIN TO PLAY CONTENT
6. ADJUST VOLUME TO SUIT STORE REQUIREMENTS - VOLUME CONTROL KNOB IS LOCATED AT THE REAR OF SMART DISPLAY UNIT
7. PLEASE ENSURE POWER IS LEFT ON - UNIT WILL AUTOMATICALLY TURN ON / OFF
8. SMART DISPLAY UNIT IS NOW FULLY OPERATIONAL
9. INSTALL WHIRLPOOL PRODUCTS INTO THE DISPLAY STAND - AS PER CASTEL BRIEF

**REMOVE PACKAGING:**

1. REMOVE ALL PACKAGING, PALLET, CARDBOARD, ETC

**TROUBLE SHOOTING:**

**IF THE SMART DISPLAY UNIT DOES NOT POWER ON;**

1. CHECK POWER LEAD IS PLUGGED IN
2. CHECK POWER IS ON
3. CHECK UNIT FOR DAMAGE

**HELP DESK:**

**FOR ALL TECHNICAL ASSISTANCE PLEASE CALL HELP DESK**

**CRYSTAL CLEAR HELP DESK - 1300 769 655**